

Be Sure to Specify Model and Serial Number of Motor When Ordering Parts


PART NO. 375605 TO 590646 INCL.

Part No. Part motor	Name of Part	Last Price per Piece
375605	Propeller and Bushing Assembly	5.50
375606	Gearcase Head and Oil Retainer Assembly	3.05
375613	Stern Bracket and Clampscrew Assembly - Port	2.75
375614	Stern Bracket and Clampscrew Assembly - Star	
(Order 376034)		
375615	Crankshaft Assembly	26.25
375616	Float Chamber and Plug Assembly	4.35
375617	Cylinder and Crankcase Assembly	53.25
375619	Float and Arm Assembly	.85
375620	Starter Housing and Pin Assembly	3.05
375622	Filter Yoke and Thumb Screw Assembly	4.45
375623	Filter Assembly	3.05
375626	Timing Lever Assembly	1.10
375627	Throttle Shaft, Lever and Pin Assembly	.85
375628	Venturi Assembly - Slow Speed	1.40
375629	Cross Shaft Arm and Pin Assembly	.45
375631	Shift Lever and Knob Assembly	.85
375633	Throttle Lock Assembly - Steering Bracket	2.20
375634	Swivel Bracket and Screw Assembly	1.05
375635	Impeller Assembly - Water Pump	4.35
375638	Shroud Cover and Transfer Assembly - Port	1.10
375646	Lower Pump Housing and Plug Assembly	10.50
375649	Gasoline Tank and Transfer Assembly (Only)	11.00
375651	Flange and Driveshaft Casing Assembly (QDL)	8.25
375652	Float Valve and Seat Assembly	22.00
375654	Float and Float Support Assembly	11.50
375658	Filter Cap - Mile Master Fuel Tank	1.45
375661	Diaphragm Housing - Push Rod Housing and Guide Assembly	2.50
375662	Carburetor Complete	2.20
375670	Tool Kit Assembly	3.30
375673	Oil Line Assembly	36.00
375674	Gas Line - Filler to Fuel Connector	1.00
375675	Air Line - Carburetor to Fuel Connector	.55
375676	Gas Line - Carburetor to Filler	.45
375677	Water Tube Assembly - Cylinder to Pump	.55
375678	Tube Assembly - Pump to Cover - Mile Master Fuel Tank	1.00
375679	Carburetor Body, Valve and Venturi Assembly	.55
375680	Starter Assembly Complete	11.75
375681	Gearcase Upper and Shift Rod Assembly	15.25
375682	Float Bowl and Float Assembly	5.50
375683	Water Tube - Cylinder (QDL)	12.50
375685	Pinion Bearing, Propeller Gear and Lever Assembly - QD-10.	1.10
375686	Coil Assembly (Order Part No. 580040)	22.00
375708	Shifter Assembly - Clutch Dog	
375711	Mounting Bracket Assembly	3.60
375716	Rubber Mounting - Power Head to Lower Unit	.95
375719	Pinion, Bearing and Propeller Gear Assembly - QD-11	22.00
375722	Piston, Connecting Rod Assembly with Rings, less	
375730	Bearings (Lower)	
375731	Rubber Mounting and Screw Assembly	15.50
375742	Clampscrew Assembly with Plate and Retainer	1.95
375756	Upper Pump - Housing and Bushing Assembly - QDL	.95
375851	Upper Pump - Housing and Bushing Assembly	8.25
375868	Piston, Connecting Rod Assembly with Rings, less	7.00
Bearing (Upper)		
376034	Stern Bracket, Lockplate and Bolt Assembly	15.50
376035	Push Rod - Breaker	3.50
376102	Clip - Ring Armature Plate Mounting Screws	.35
510120	Insulation Strip - Breaker Assembly	.025
510121	Armature Plate Casting Only	4.15
580016	Breaker Assembly	2.75
580017	Lead Assembly - Breaker to Switch - Short	3.35
580027	Breaker Bracket and Point	1.30
580054	Oil Assembly	.30
580060	High Tension Lead - Short	.60
580066	Armature Plate Assembly	30.25
580074	Lead Assembly - Breaker to Switch - Long	.35
580114	Flywheel Assembly	17.50
590671	Flywheel Assembly (Use 580114)	
590646	Starter Pulley Assembly	2.50

Order All Parts from Nearest Service Station or Dealer

REPAIR PARTS CATALOG

 FOR 1949-50
Models QD-10 and 11
10 hp

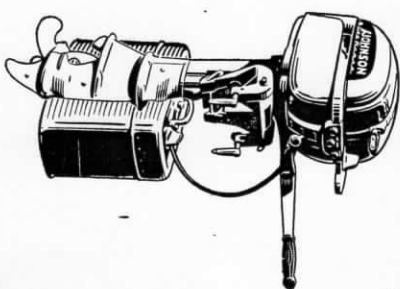

JOHNSON MOTORS

Waukegan, Illinois, U.S.A.

All Prices Subject to Change Without Notice

MAGNETO

Warranty

 
We warrant each new outboard motor of our manufacturer to be free from defects in material and workmanship under normal use and service, our obligation under this warranty being limited to making good at the factory any part or parts thereof which shall, within three (3) months after delivery of such motor to original purchasers, be returned to us with transportation charges prepaid, and which our examination shall disclose to our satisfaction to have been thus defective; this warranty being expressly in lieu of all other warranties and representations expressed or implied and of all other liabilities in connection with the sale or use of any motors.

This warranty shall not apply to any motor which shall have been repaired or altered outside the factory in any way so as to affect its stability, nor which has been subject to misuse, negligence or accident. Warranty is void if motor is used for racing purpose.

We make no warranty in respect to trade accessories not of our manufacture; inasmuch as they are usually warranted separately by their respective manufacturers.

Because of the usual strains and accidents to which such products may be subjected, we make no warranty of either material or workmanship in racing outboard motors or any of our products when used for racing.

Claims must be entered on motors or motor parts returned to the factory for inspection, repair or replacement. Request form No. SE-16 from local Johnson Dealer or Service Station. This form should be filled in, signed by the motor owner and dealer or service station representatives and mailed to the factory with returned material. TRANSPORTATION CHARGES PREPAID.

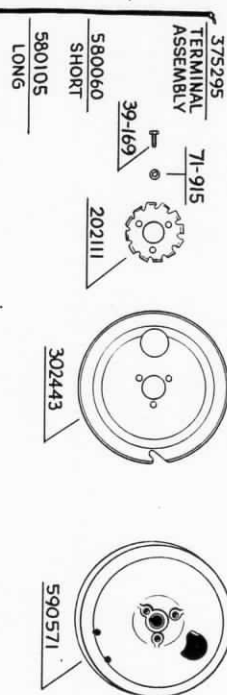

120001
3-28
130255

580016
43-110
3-28
580054
510102

51-65
300531
510126
580017
510126
71-1531
580074
71-1102

71-1102
3-28
300154
375626
71-1026
3-28
39-169
302131
510102
43-110
510121
71-45
71-915
53-85
3-28
300153

71-765
71-915
302097

 
580040
300154
71-940

510055
71-1577
375134
171186
510120
580027
510120
300152
19-189
3-28
300154
71-918

580066 - ARMATURE PLATE ASSEMBLY COMPLETE


Order All Parts from Nearest Service Station or Dealer

POWER HEAD

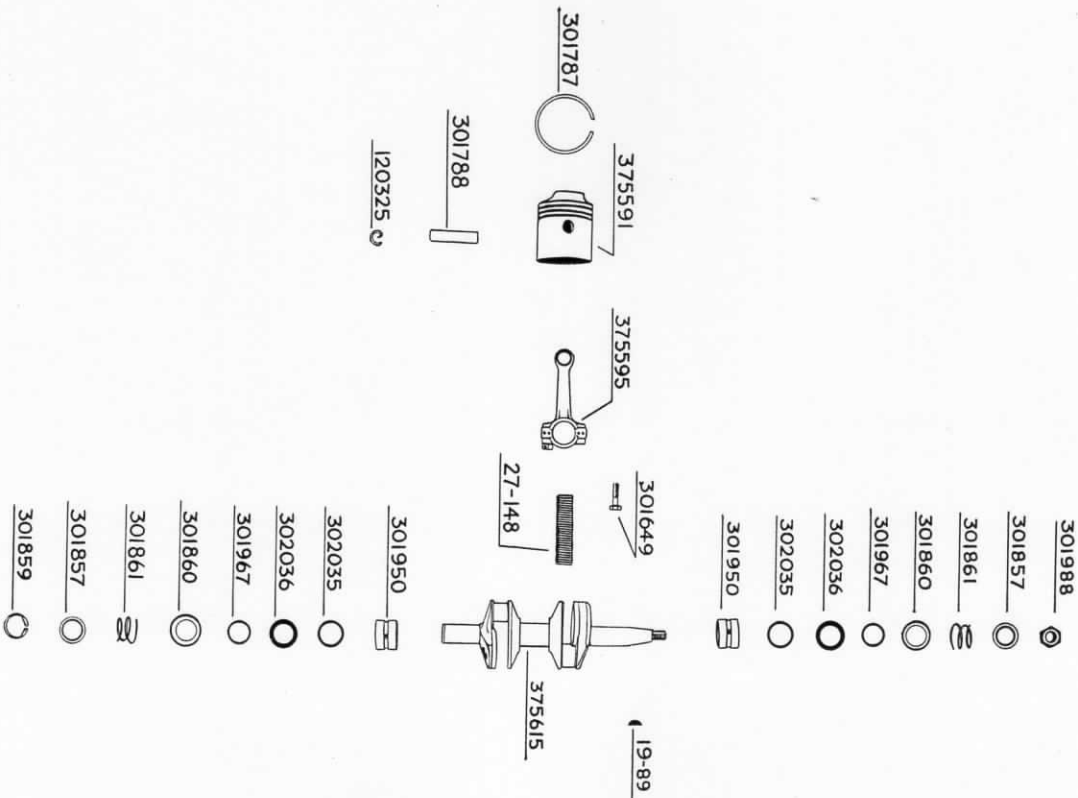


Order All Parts from Nearest Service Station or Dealer

 CARBURETOR

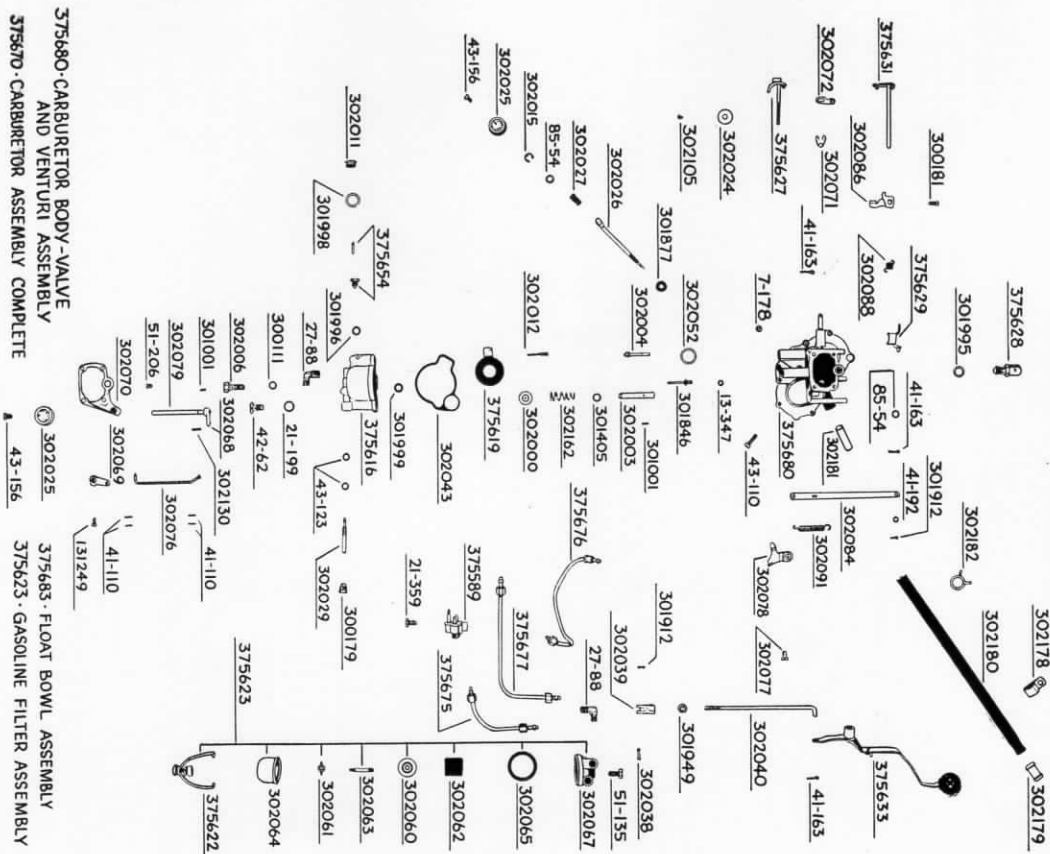

Order All Parts from Nearest Service Station or Dealer

 SHROUDS AND TRANSFERS

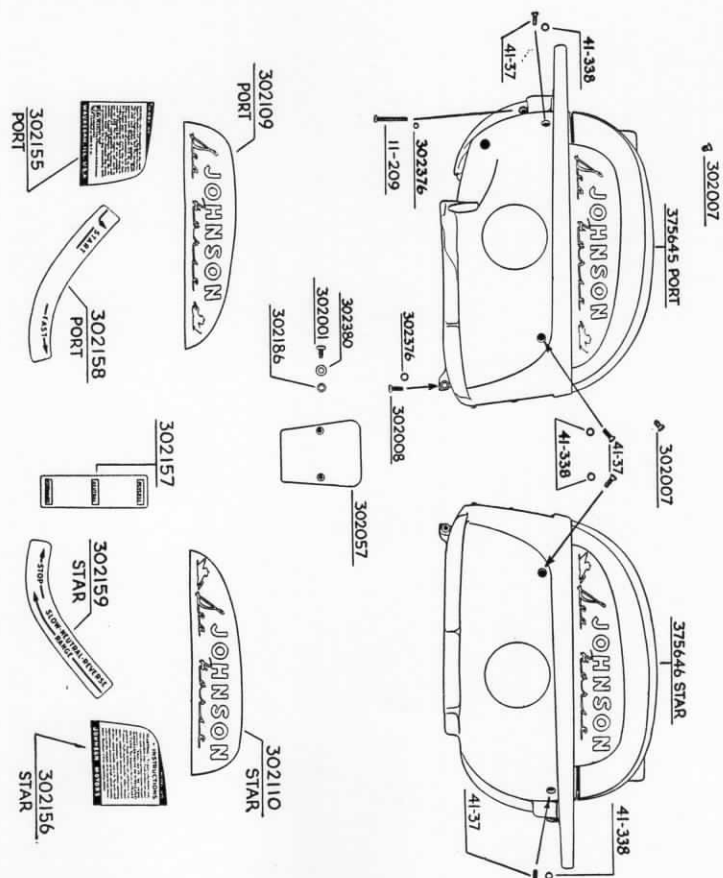


Notes:

Notes:


Order All Parts from Nearest Service Station or Dealer

 LOWER UNIT

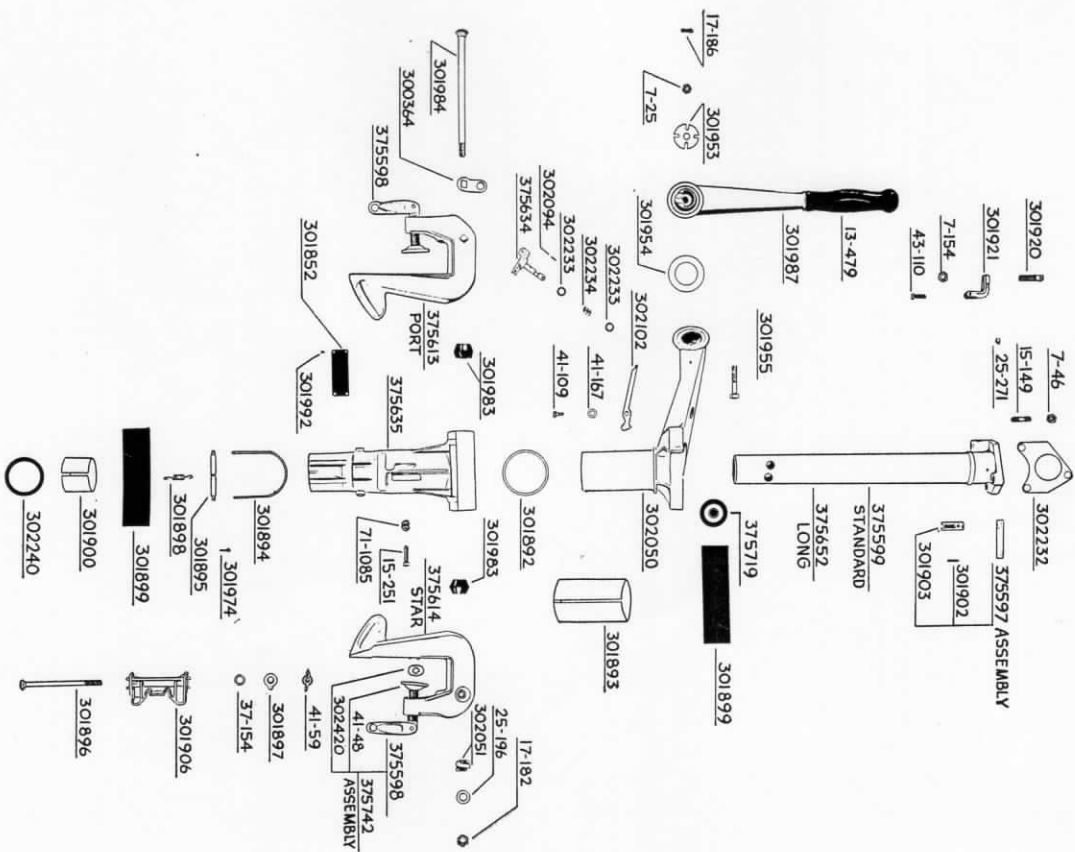


Order All Parts from Nearest Service Station or Dealer

 LOWER UNIT

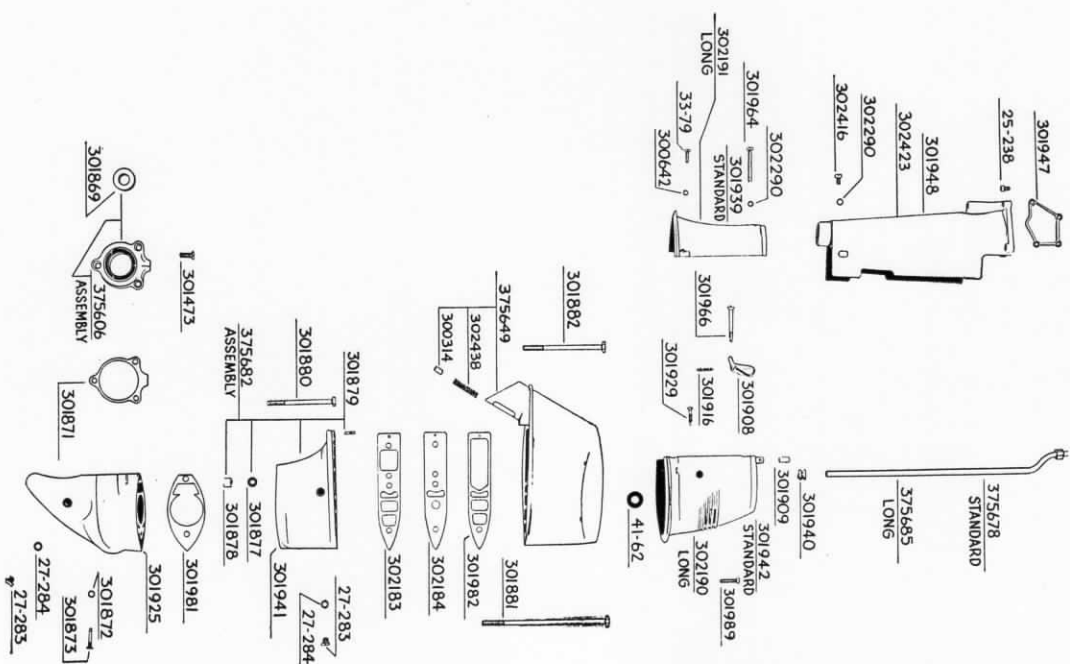


Order All Parts from Nearest Service Station or Dealer

 LOWER UNIT

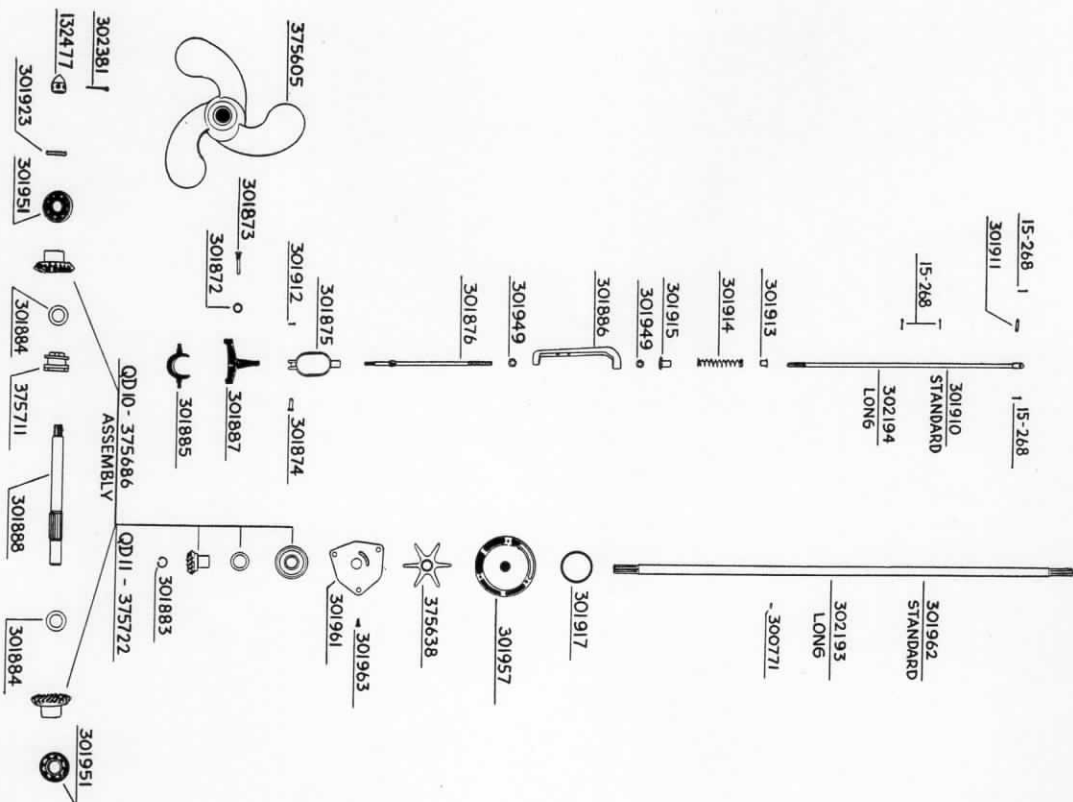

Order All Parts from Nearest Service Station or Dealer

 STARTER ASSEMBLY

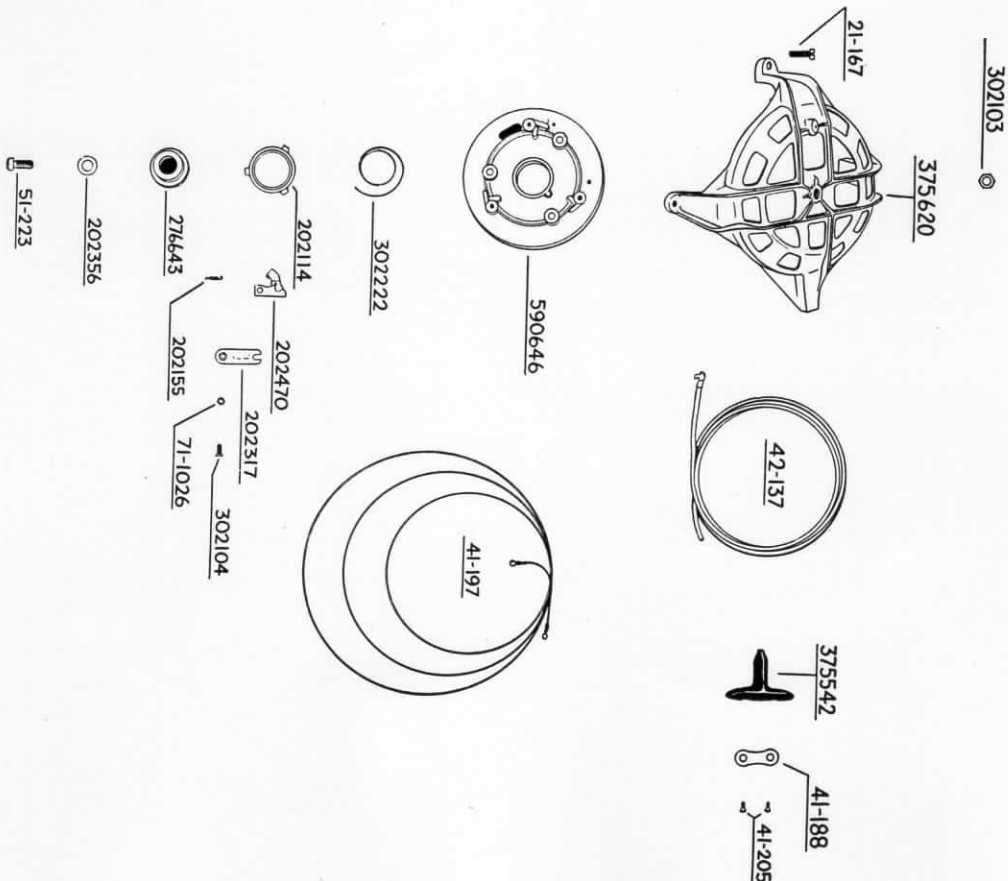


STARTER ASSEMBLY COMPLETE - 375681

Order All Parts from Nearest Service Station or Dealer

Numerical Parts List

Part No.	No. required per motor	Name of Part	List Price per Piece
3-28	12	Lockwasher - Condenser, Lead Clamp, Lead Armature Plate, Breaker and Timing Lever Mounting.....	.025
7-25	1	Nut - Steering Handle to Bracket.....	.10
7-46	7	Nut - Flange to Power Head and Cylinder to Crankcase Assm.	.025
7-116	1	Screw - Flange to Cylinder - Short.....	.15
7-154	1	Nut - Clamping Lever Extension.....	.05
7-178	1	Core Plug - Carburetor Body.....	.15
11-45	1	Cotter Pin - Chain to Tank.....	.05
11-209	1	Screw - Shroud - Port to Star - Front.....	.15
13-52	4	Lockwasher - Rubber Mounting.....	.025
13-347	1	Gasket - Jet - Carburetor.....	.025
14-479	1	Rubber Grip.....	.55
13-558	2	Screw - Leaf Valve Cover to Crankcase.....	.05
15-149	1	Stud - Flange to Power Head.....	.10
15-251	1	Screw - Swivel Bracket.....	.025
15-268	4	Cotter Pin - Shift Rod and Shift Rod Pin.....	.025
17-182	1	Nut - Tilting Shaft Bolt.....	.15
17-186	2	Cotter Pin - Push Button - Gas Tank and Steering Handle.....	.025
19-51	1	Core Plug - Cylinder Head.....	.025
19-89	1	Key - Woodruff #6 - Crankshaft.....	.025
19-123	5	Screw - Cover - Short.....	.025
19-136	4	Nut - Shroud Mounting Screw.....	.05
19-189	2	Screw - Breaker Bracket to Plate.....	.05
19-191	4	Screw - Leaf Valve Cover to Crankcase - Check Valve to Leaf Plate.....	.025
21-167	3	Screw - Starter Housing to Mounting Bracket.....	.05
21-170	2	Stud - Crankcase to Cylinder.....	.025
21-195	3	Nut - Push Rod and Support Rod.....	.10
21-199	1	Washer - Check Valve - Carburetor.....	.025
21-359	1	Screw - Fuel Connector to Bracket.....	.025
21-486	1	Screw - Flange to Cylinder - Long.....	.05
25-196	1	Washer - Tilting Shaft.....	.05
25-238	5	Screw - Exhaust Tube.....	.05
25-271	1	Key - Clamping Lever to Shaft.....	.05
27-88	3	Elbow - Gasoline Line - Filter Body.....	.20
27-148	58	Needle - Connecting Rod Bearing.....	.025
27-283	2	Plug - Oil.....	.30
27-284	2	Washer - Oil Plug.....	.025
27-399	1	Core Plug - Cylinder Head.....	.05
33-79	2	Screw - Cover to Upper Pump Housing.....	.05
37-154	7	Washer - Cylinder and Crankcase Studs - Thrust Socket Bolt.....	.025
39-169	4	Screw - Timing Lever - Ratchet and Pulley to Dome.....	.025
41-37	4	Screw - Shroud to Bracket.....	.05
41-48	2	Swivel Plate - Clamp Screw.....	.10
41-59	1	Wing Nut - Thrust Socket Bolt.....	.45
41-62	1	Seal - Driveshaft.....	.60
41-109	1	Screw - Lever to Steering Bracket.....	.10
41-110	4	Pin - High Speed Link.....	.025
41-163	3	Cotter Pin - Shift Lever, Cross Shaft - Shift and Lever Link to Shift Lever.....	.025
41-167	1	Bow Washer - Primer.....	.025
41-178	6	Screw - Bracket to Power Head.....	.025
11-188	1	Clamp Plate - Rope Handle.....	.05

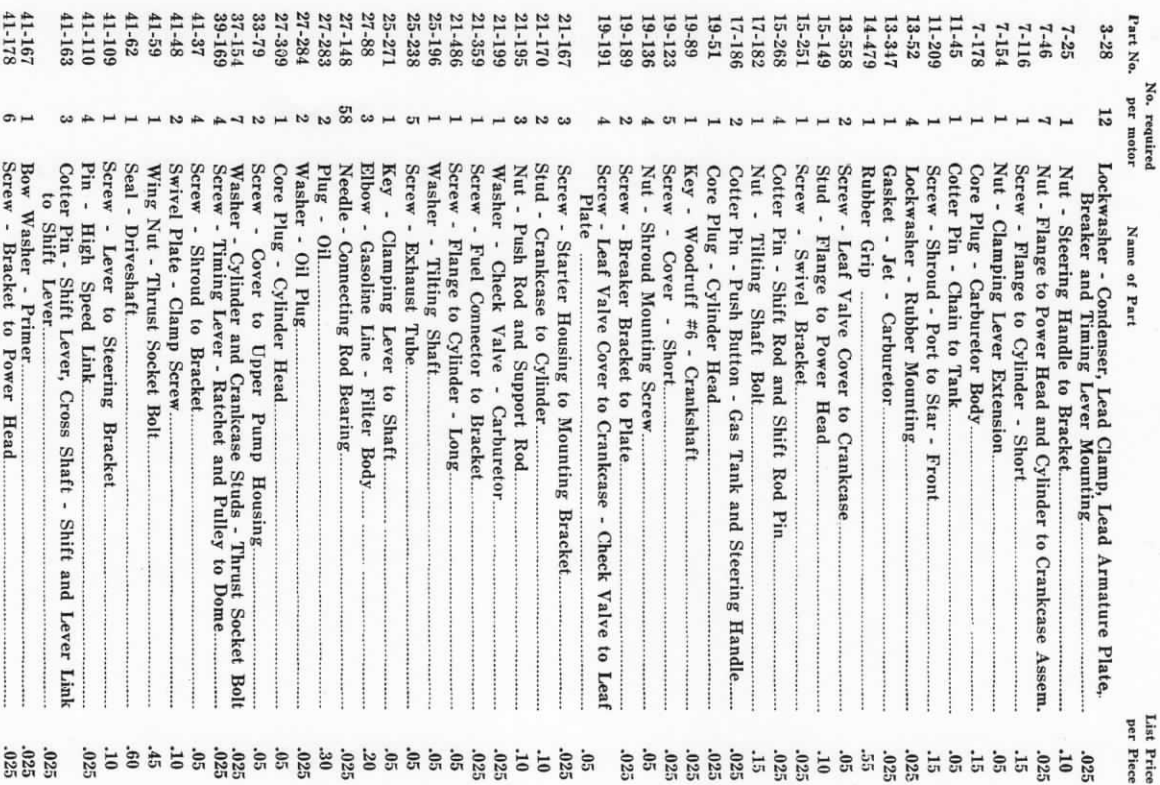 

Be Sure to Specify Model and Serial Number of Motor When Ordering Parts

PART NO. 41-192 TO 300402 INCL.

Part No.	No. required per motor	Name of Part	Last Price per Piece
41-192	1	Washer - Cross Shaft Pin	.025
41-197	1	Starter Spring	1.10
41-205	2	Screw - Clamp Plate to Handle	.025
41-223	4	Screw - Armature Plate Support	.05
41-328	1	Stud - Crankcase to Cylinder	.10
41-338	4	Lockwasher - Shroud to Bracket	.025
42-62	1	Clock Valve	1.10
42-137	1	Starter Cord and Anchor	1.95
43-110	12	Screw - Carburetor Body to Crankcase - Clamping Lever - Armature Plate Mounting	.025
43-123	2	Packing - High Speed Needle Valve	.025
43-147	1	Screw - Plug - Bypass - Lower	.025
43-156	2	Screw - Adjusting Knob	.025
43-259	8	Screw - Bypass Cover	.025
43-302	8	Washer (small) Shroud Mounting	.025
51-135	1	Screw - Crankcase to Cylinder and Filter to Bracket	.05
51-206	4	Screw - Control Shaft Bracket	.025
51-223	1	Screw - Spindle to Starter Housing	.05
53-85	2	Screw - Condenser to Plate	.025
71-45	2	Screw - Bar Nut - Breaker	.025
71-78	2	Screw - Fuel Gage	.025
71-765	3	Screw - Cam to Armature Plate - Ratchet and Pulley to Dome	.025
71-864	4	Screw - Fuel Pump	.10
71-915	6	Lockwasher - Cam to Armature Plate	.025
71-918	4	Lockwasher - Bar Nut	.025
71-940	3	Screw - Coil Mounting	.025
71-1026	4	Lockwasher - Timing Lever Screw and Retainer Screw	.025
71-1085	1	Spring - Swivel Bracket (Order Part No. 303562)	.10
71-1102	2	Nut - Coil and Stop Switch Mounting Screw - Breaker	.025
71-1487	2	Lockwasher - Leaf to Leaf Plate Screw	.05
71-1531	1	Washer - Stop Switch	.025
71-1577	2	Bar Nut - Breaker	.10
71-1582	4	Screw - Breaker	.025
85-54	2	Washer - Cross Shaft and Slow Speed Needle Valve	.025
120001	2	Nut - Leaf to Leaf Plate Screw	.025
120325	4	Locking - Piston Pin	.025
130255	2	Screw - High Tension Lead Clamp	.025
131249	1	Screw - Slow Speed Stop	.10
132346	9	Screw - Exhaust Cover to Cylinder	.025
132477	1	Nut - Propeller	.60
171186	4	Insulation Bushing	.025
202111	1	Ratchet - Starter	.35
202114	1	Equalizer Cup	.20
202155	3	Spring - Equalizer Cup	.10
202317	3	Retainer - Starter Pawl	.20
202356	1	Washer - Starter Spindle	.10
202470	3	Starter Pawl	.20
276643	1	Spindle and Pin Assembly	.35
300111	1	Gasket - Float Valve Seal	.10
300152	2	Bar Washer - Breaker Spring	.025
300153	2	Condenser	.90
300154	6	Washer - Breaker Mounting Screw	.025
300179	1	Packing Nut - Carburetor	.10
300181	1	Screw - Barrel Valve Cover	.10
300314	1	Plug - Screen - Water Inlet	.05
300364	1	Link - Safety Chain	.05
300399	10	Washer - Cylinder Head Screw	.025
300402	2	Taper Pin - Cylinder to Crankcase	.05

Order All Parts from Nearest Service Station or Dealer

Be Sure to Specify Model and Serial Number of Motor When Ordering Parts

PART NO. 300454 TO 301859 INCL.

Part No.	No. required per motor	Name of Part	Last Price per Piece
300454	1	Grommet - High Tension Lead Anchor	.05
300455	1	Anchor - High Tension Lead	.05
300511	1	Insulation - Stop Switch	.05
300531	1	Cup Washer - Stop Switch	.025
300532	3	Washer - Stop Switch	.05
300642	2	Lockwasher - Cover to Upper Pump Housing Screw	.025
300771	1	Pin - Eccentric	.025
301001	2	Groove Pin - Control Shaft Arm and Plunger	.15
301397	1	Straight Connector - Cylinder	.20
301405	1	Washer - Plunger	.05
301473	3	Screw - Gearcase Head	.05
301552	1	Lockwasher - Push Rod (Order Part No. 301736)	.20
301649	4	Screw - Connecting Rod	.025
301736	1	Lockwasher - Push Rod	.05
301787	6	Piston Ring	.35
301788	2	Wrist Pin	.35
301789	1	Cover - Gasoline Tank	3.60
301791	2	Support Rod - Fuel Gauge	.45
301794	1	Support Plate - Fuel Gauge	.05
301795	1	Indicator Assembly - Fuel Gauge	2.20
301797	1	Push Rod - Fuel Gauge	.90
301800	2	Support - Diaphragm - Fuel Pump	.05
301801	1	Diaphragm - Fuel Pump	.20
301802	2	Disc Valve - Inlet and Outlet - Fuel Pump	.05
301803	1	Spring - Fuel Pump	.05
301804	1	Housing - Diaphragm - Lower - Fuel Pump	.85
301805	1	Screen - Fuel Pump	.15
301806	1	Plate - Screen - Fuel Pump	.10
301808	1	Gasket - Cover to Gasoline Tank	.55
301809	1	Gasket - Push Rod Guide	.025
301810	1	Handle - Gasoline Tank	.60
301811	1	Screw - Handle to Gasoline Tank	.15
301812	1	Nut - Push Rod Guide	.15
301813	1	Screw - Cover - Gasoline Tank - Long	.025
301814	6	Washer - Cover Screw - Gasoline Tank	.025
301815	1	Push Button - Fuel Pump	.15
301819	4	Washer - Nipple and Connector	.025
301820	1	Nipple - Hose - Cover and Connector	.20
301821	1	Hose - Gasoline Tank to Connector	4.35
301822	4	Hose Clamp	.025
301824	2	"O" Ring - Fuel Connector Seal	.10
301828	2	Retainer - Seal Ring - Fuel Connector	.10
301829	1	Spring - Lock - Fuel Connector	.025
301830	1	Lock - Fuel Connector	.15
301832	1	Rivet - Lock	.025
301833	1	Gasket - Filler Cap - Gasoline Tank	.05
301842	1	Retaining Ring - Armature Plate	.55
301846	1	Jet - Slow Speed - Carburetor	.55
301847	2	Gasket - Bypass Cover	.05
301848	2	Cover - Exhaust - Inner	.35
301849	1	Name Plate	.90
301852	1	Gasket - Inner to Outer Exhaust Cover	.30
301853	1	Gasket - Inner Exhaust Cover to Cylinder	.15
301854	1	Wave Washer - Armature Plate Support	.15
301855	1	Retaining Washer - Outer - Seal Spring	.60
301857	2	Screw - Leaf Attaching	.05
301858	1	Retaining Ring - Seal Spring	.05
301859	1		.15

Order All Parts from Nearest Service Station or Dealer

Be Sure to Specify Model and Serial Number of Motor when Ordering Parts
PART NO. 301860 TO 301940 INCL.

Part No.	No. required per motor	Name of Part	Last Price per Piece
301860	2	Retaining Washer - Inner Seal Ring	.05
301861	2	Spring - Seal	.05
301862	1	Gasket - Cylinder Head	.35
301863	1	Bracket - Port - Shroud and Starter Mounting	.90
301864	1	Bracket - Star - Shroud and Starter Mounting	.65
301865	2	Screw - Support - Rubber Mounting (Order Part No. 375731)	.90
301869	1	Oil Retainer - Propeller Shaft	.05
301871	1	Gasket - Gearcase Head	.025
301872	1	Gasket - Pivot Pin	.35
301873	1	Pivot Pin - Shifter Lever	.20
301874	1	Pin - Yoke to Shifter Lever	.85
301875	1	Yoke - Shifting Lever	.45
301876	1	Shift Rod - Lower	.10
301877	2	"O" Ring - Lower Shift Rod Seal and Slow Speed Needle Valve - Carburetor	.10
301878	1	Bushing - Shift Rod - Lower	.05
301879	1	Dowel Pin - Upper Gearcase	.35
301880	1	Screw - Upper to Lower Gearcase	.95
301881	1	Bolt - Lower Pump Housing to Lower Gearcase	.45
301882	1	Bolt - Lower Pump Housing to Upper Gearcase	.10
301883	1	Retaining Ring - Pinion	.60
301884	2	Thrust Washer - Propeller Shaft	.45
301885	1	Cradle	.65
301886	1	Link - Shift Rod	.70
301887	1	Lever - Shifter	9.35
301888	1	Propeller Shaft	.30
301889	1	Thrust Washer - Swivel Bracket	1.05
301890	1	Linking - Swivel Bracket	1.05
301891	1	Locking Lever - Reverse	.40
301892	1	Rod - Reverse Lock	.15
301893	1	Bolt - Thrust Socket	.20
301894	1	Lockplate - Stern Bracket	.20
301895	1	Spring - Reverse Lock	.35
301896	1	Rubber Bushing - Driveshaft	.05
301897	1	Spacer - Rubber Bushing	.45
301898	1	Pin - Shift Lever to Shaft	.20
301899	1	Lever - Shift Rod	.65
301900	1	Thrust Lock	.10
301901	1	Valve - Exhaust Relief	1.00
301902	1	Bushing - Shift Rod - Upper	.15
301903	1	Shift Rod - Upper	.025
301904	1	Pin - Shift Rod	.10
301905	1	Cutter Pin - Clevis, Cross Shaft Pin and Yoke to Pin	.10
301906	1	Sleeve - Shift Rod	.35
301907	1	Spring - Shift Rod	.05
301908	1	Sleeve - Reverse Lock	.40
301909	1	Spring - Exhaust Relief Valve	.35
301910	1	"O" Ring - Water Pump Seal	1.10
301911	1	Cover - Exhaust - Outer	.20
301912	1	Extension - Clamping Bar	.40
301913	1	Clamping Lever	.05
301914	1	Shear Pin	8.80
301915	1	Gearcase - Lower	.10
301916	1	Screw - Upper Pump Housing to Driveshaft Casing	1.55
301917	1	Cover - Upper Pump Housing	.10
301918	1	Grommet - Water Inlet Tube	.10

Order All Parts from Nearest Service Station or Dealer

Be Sure to Specify Model and Serial Number of Motor When Ordering Parts
PART NO. 301941 TO 302032 INCL.

Part No.	No. required per motor	Name of Part	Last Price per Piece
301941	1	Gearcase - Upper	5.25
301942	1	Upper Pump Housing (Use 375851)	.10
301943	1	Gasket - Exhaust Tube	3.60
301944	1	Exhaust Tube	.05
301945	3	Nut - Shift Rod Upper and Lower - Clevis to Shift Lever Link	7.45
301946	2	Roller Bearing Assembly - Upper and Lower Journal	1.60
301947	2	Ball Bearing - Propeller Shaft	1.10
301948	1	Spring Washer - Steering Handle to Bracket	.10
301949	1	Washer - Steering Handle to Bracket	.15
301950	1	Screw - Steering Bracket to Handle	2.30
301951	1	Impeller Housing	.95
301952	1	Plate - Impeller Housing - Water Pump	9.10
301953	1	Driveshaft	.05
301954	3	Screw - Plate to Impeller Housing	.15
301955	2	Screw - Exhaust Tube to Upper Pump Housing	1.30
301956	2	Leaf - Carburetor	.15
301957	1	Clampcrew - Upper Pump Housing	.025
301958	2	"O" Ring - Carbon Seal to Crankshaft	.025
301959	2	Cotter Pin - Reverse Rod Lock	.20
301960	1	Gasket - Upper to Lower Gearcase	.05
301961	1	Gasket - Lower Pump Housing to Upper Gearcase	.100
301962	2	Conical Washer - Tilting Shaft	.95
301963	1	Bolt - Tilting Shaft	.05
301964	1	Steering Handle	.025
301965	1	Nut - Crankshaft	.025
301966	4	Screw - Upper to Lower Pump Housing	.05
301967	1	Float Chamber (Order Part No. 375616)	.025
301968	4	Stud - Name Plate	.025
301969	1	Washer - Slow Speed Venturi	.025
301970	1	Washer - Float Valve	.025
301971	1	Gasket - Float Chamber Plug	.025
301972	1	Gasket - Float Chamber to Carburetor Body Boss	.50
301973	2	Seal - Primer Plunger	.15
301974	1	Screw - Spark Plug Cover	.20
301975	1	Nozzle - High Speed	.50
301976	1	Screw - Float - Carburetor to Carburetor Boss	.05
301977	2	Screw - Shroud - Port to Star	.10
301978	10	Screw - Shroud Handle Star to Port	.05
301979	1	Screw - Float Chamber	.15
301980	1	Hinge Pin - Float Arm	.20
301981	1	"E" Ring - Slow Speed Needle Valve	.05
301982	1	Support - Arm Plate	.05
301983	1	Stud - Crankcase to Cylinder	.05
301984	1	Stud - Crankcase to Cylinder	.05
301985	1	Throttle Valve - Carburetor	.025
301986	2	Adjusting Knob - Slow and High Speed Needle Valves	.40
301987	1	Spring - Slow Speed Needle Valve	.05
301988	1	Needle Valve - High Speed	.55
301989	1	Leaf Valve - Crankcase Drain	.05
301990	1	Gasket - Leaf Valve Cover	.025

* Used only on QD Motors below Serial No. 819741 (See Part No. 302423)

Order All Parts from Nearest Service Station or Dealer

PART NO. 302033 TO 302156 INCL.

Part No.	No. required per motor	Name of Part	Last Price per Piece
302033	1	Cover - Leaf Valve.....	.20
302034	1	Plate - Leaf Valve.....	.20
302035	2	"O" Ring - Upper and Lower Bearing Seal.....	.025
302036	2	Seal - Upper and Lower Bearing.....	.55
302038	1	Pin - Clevis to Extension Lever.....	.15
302039	1	Clevis - Extension Lever to Link.....	.35
302040	1	Link - Clevis to Shift Lever.....	.45
302041	2	Spring - Mounting - Power Head to Lower Unit (Order 375731).....	
302042	1	Check Valve - Air Line - Carburetor.....	.10
302043	1	Gasket - Float Chamber to Carburetor Body.....	.025
302044	1	Gasket - Leaf Plate to Crankcase.....	.10
302045	1	Gasket - Leaf Plate to Carburetor.....	.10
302046	2	Spacer - Check Valve Spring - Carburetor.....	.025
302047	2	Leaf - Stop.....	.20
302048	1	Spring - Check Valve - Carburetor.....	.025
302049	1	Leaf Plate.....	4.95
302050	1	Steering Bracket.....	4.95
302051	1	Spring - Tilting Shaft.....	.65
302052	1	Venturi - Carburetor.....	.50
302057	1	Cover - Spark Plug.....	.40
302060	1	Retainer - Gasoline Filter.....	.05
302061	1	Wing Nut - Gasoline Filter.....	.05
302062	1	Filter - Gasoline Filter.....	.65
302063	1	Stud - Gasoline Filter.....	.15
302064	1	Bowl - Gasoline Filter.....	.30
302065	1	Gasket - Gasoline Filter.....	.05
302067	1	Body - Gasoline Filter.....	.95
302068	1	Arm - Control Shaft - Carburetor.....	.30
302069	1	Arm - High Speed Needle Valve - Carburetor.....	.35
302070	1	Bracket - Control Shaft.....	.35
302071	1	Spring - Throttle Link - Carburetor.....	.05
302072	1	Link - Throttle Lever to Cross Shaft Lever.....	.05
302076	1	Link - High Speed Needle Valve.....	.55
302077	1	Screw - Bell Crank Primer.....	.10
302078	1	Bell Crank - Primer - Carburetor.....	.20
302079	1	Control Shaft - Carburetor.....	.55
302084	1	Link - Steering Bracket to Carburetor.....	.15
302086	1	Cam Lever - Carburetor.....	.35
302088	1	Spring - Cross Shaft.....	.60
302091	1	Spring - Steering Bracket Link.....	.20
302094	1	Groove Pin - Steering Bracket.....	.025
302097	1	Cam - Armature Plate.....	1.10
302102	1	Lever - Steering Bracket.....	.35
302103	1	Nut - Spindle Screw.....	.025
302104	3	Screw - Retainer.....	.025
302105	1	Screw - Valve to Throttle Shaft.....	.025
302109	1	Transfer - Port.....	.35
302110	1	Transfer - Star.....	NET
302130	1	Groove Pin - Control Shaft.....	NET
302131	1	Screw - Magneto Handle.....	.025
302135	1	Spring - Pressure Relief Valve.....	.05
302136	1	Valve - Pressure Relief.....	.05
302137	1	Washer - Pressure Relief Valve.....	.025
302155	1	Transfer - Oiling.....	N/C
302156	1	Transfer - Starting.....	N/C

Order All Parts from Nearest Service Station or Dealer

PART NO. 302157 TO 375599 INCL.

Part No.	No. required per motor	Name of Part	Last Price per Piece
302157	1	Transfer - Shifting.....	N/C
302158	1	Transfer - Timing - Port.....	N/C
302159	1	Transfer - Timing - Star.....	N/C
302162	1	Spring - Plunger - Carburetor.....	.10
302166	1	Transfer (Gasoline) Gas Tank.....	N/C
302178	2	Clamp - Hose.....	.15
302179	1	Plug - Carburetor Manifold Hose.....	.10
302180	1	Hose - Carburetor Manifold.....	.30
302181	1	Nipple - Carburetor Manifold Tube.....	.15
302182	1	Clamp - Hose to Carburetor Nipple.....	.05
302183	1	Gasket - Upper Gearcase to Plate.....	.05
302184	1	Plate - Lower Pump Housing to Upper Gearcase.....	.20
302186	2	Washer - Retaining Spark Plug Cover Screw.....	.025
302190	1	Upper Pump Housing (QDL).....	6.95
302191	1	Cover - Upper Pump Housing (QDL).....	2.75
302193	1	Driveshaft (QDL).....	10.35
302194	1	Shift Rod - Upper (QDL).....	1.00
302222	1	Friction Spring - Starter.....	.35
302232	1	Gasket - Flange to Power Head.....	.05
302233	2	Washer - Throttle Lock.....	.05
302234	1	Spring - Throttle Lock.....	.025
302235	1	Plug - Bypass - Lower.....	.30
302240	1	Spacer - Swivel Bracket to Upper Pump Housing.....	.05
302283	2	Spark Plug.....	.75
302290	3	Washer - Exhaust Tube to Upper Pump Housing.....	.025
302336	2	Transfer - Gasoline Tank (Large).....	.30
302337	2	Lockwasher - Shroud - Port to Star - Front and Rear.....	NET
302380	2	Washer - Spark Plug Cover to Shroud Screw.....	.025
302381	1	Cotter Pin - Propeller Nut.....	.025
302404	4	Bracket - Shroud Mounting.....	.35
302405	8	Grommet - Shroud Mounting.....	.10
302406	4	Spacer - Shroud Mounting.....	.05
302407	4	Washer - Large - Shroud Mounting.....	.05
302416	4	Screw - Shroud Mounting.....	.05
302418	2	Screw - Exhaust Tube to Upper Pump Housing.....	.05
302420	2	Retainer - Swivel Plate.....	.025
302422	2	Lockscrew - Rubber Mounting Support Screw.....	.20
302423**	1	Exhaust Tube.....	3.25
302428*	2	Screw - Support - Rubber Mounting.....	.10
302429	2	Screw - Support Rubber Mounting.....	.60
302438	1	Screen - Water Inlet.....	.15
302443	1	Pulley - Emergency Starter.....	.90
303562	1	Spring - Swivel Bracket.....	.30
375134	2	Breaker Spring and Point Assembly.....	.10
375295	2	Terminal - Ignition Leads.....	.60
375542	1	Handle - Starter Rope.....	.10
375583	1	Shut Off Valve Assembly - Gasoline Tank.....	.30
375586	1	Cover Assembly.....	8.75
375587	1	Fuel Connector.....	4.50
375588	1	Fuel Pump Assembly.....	5.85
375589	1	Body Assembly - Fuel Connector.....	1.50
375590	1	Mile Master Fuel Tank Assembly (Complete).....	40.00
375591	2	Piston and Dowel Pin Assembly.....	3.85
375594	2	Cylinder Head and Core Plug Assembly.....	3.65
375595	2	Connecting Rod Assembly.....	8.25
375597	1	Shaft and Lever Assembly.....	1.15
375598	2	Clamp and Drive Shaft Casing Assembly.....	1.70
375599	1	Flange and Drive Shaft Casing Assembly.....	9.00

**To be used only on Model QD Motors above and including Serial No. 819741 (See Part No. 301948)

*To be used only on Model QD Motors above and including Serial No. 822350—Below Serial No. 822350 use Part No. 375731.

Order All Parts from Nearest Service Station or Dealer